




Human Detection only alerts you care about

The human detection feature lets you set the camera to send alerts only when human motion is detected. This cuts down inessential alerts such as those caused by pets, drapes under an AC vent, or foliage swaying in wind.

Detect human motion
only, eliminating
inessential alerts

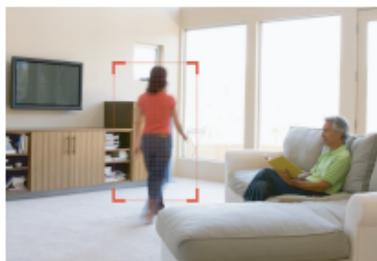


Interprets still figures as
background, so they do
not cause alerts




How to set human detection via the Foscam App?

Under the "Settings" screen tap "Alert." Then select "Human Detection" and tap the switch icon. See back page for detailed settings illustration.

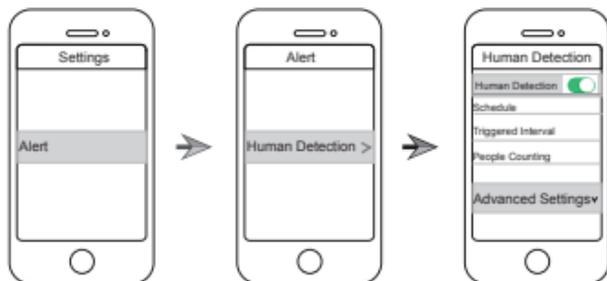

How to set human detection via the Search Tool?

On the "Settings" page click "Detector," and then select "Human Detection." Tick the checkbox for "Enabled" to activate the human detection feature.

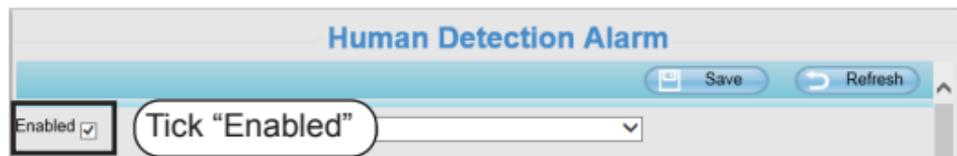

Note

After placing the camera in your preferred location, please set the camera installation angle in the "**Advanced Settings**" menu (available in both the App and Search Tool). We recommend selecting Horizontal viewing angle if your camera is placed on a desk or waist-high surface. If your camera is placed in a high or overhead position, we recommend choosing the Tilt setting.



⦿ Tilt viewing angle



⦿ Horizontal viewing angle