

Upgrade Guide for NVR FN7108E

Attention: After upgrading, please uninstall the previous plugin, clear the cache of your browser, then it updates plugin when log-in next time.

This firmware is for NVR from NVR KIT FN7108E, please check your NVR model on the sticker. Updating with the wrong firmware could severely damage and/or break your NVR.

Note:

For FN7108E with system firmware 2.1.1.5,application firmware 1.41.3.8 can upgrade to this version.

Preparation before upgrading



Upgrade Firmware


Preparation before upgrading:

1. Please restart your NVR before the upgrading;
2. DO NOT upgrade firmware over internet, just finish it in LAN;
3. Keep power on during the upgrading;
4. Logging your NVR as administrator first, upgrade firmware on web page.

Method 1: Update firmware on IE Web Page.

Step1: Log-in your NVR FN7108E, go to **Settings** → **System Management** → **Upgrade**.

Click **Browse** → choose the **upgrade.bin** file, click **Open** → click **Upgrade**.

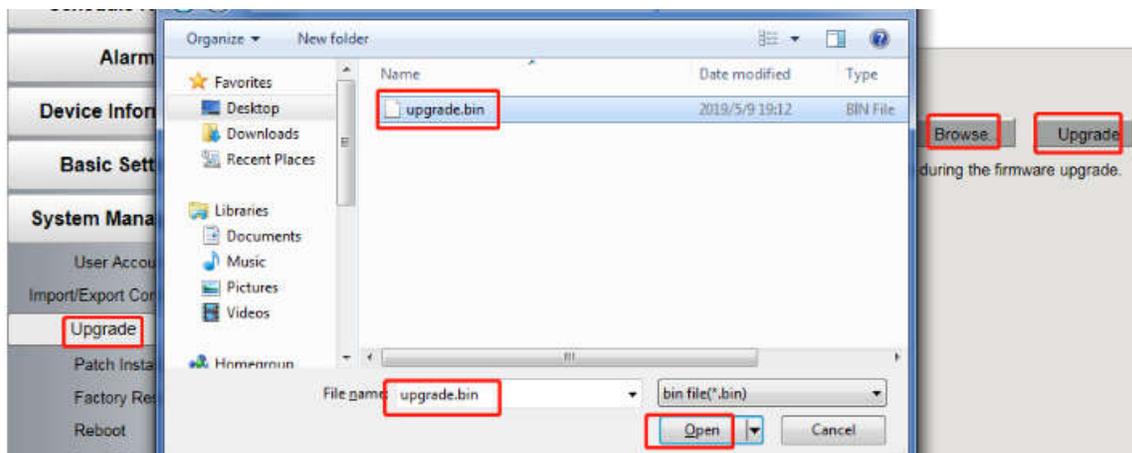

Step 2: “Upgrading, do not power off ... Xs” pop up, NVR’s IP address will disappear from the IP Camera Tool. Then NVR will reboot itself, DO NOT power off the NVR, please wait till the NVR’s IP address reappear in the IP Camera Tool.

Step 3: Log-in your NVR again to check the **Firmware Version**, and **Plug-In Version**.



Firmware Version	
Device Type	FN7108E
Device Name	FN7108E
System Firmware Version	2.1.1.5
Application Firmware Version	1.41.3.9
Plug-in Version	3.0.0.10

Congratulations, your NVR successfully upgraded to the latest firmware!

Note:

1. You'd better re-install the plug-in, in case it's not updated.
2. The firmware version will be updated after upgrading.

Attention: After upgrading, please uninstall the previous plugin, clear the cache of your browser, then it updates plugin when log-in next time.

Method 2: Upgrade firmware on **Monitor with USB disk**.

Step1: Copy the **upgrade.bin** file to USB disk main directory, insert the USB disk to NVR. (If it is your first time to use the USB disk, you have to format it first in your NVR.)

Step2: Log-in your NVR on Monitor, right click go to **Menu** → **System**

→ **Upgrade**. The device will recognize the **upgrade.bin** file automatically. **Note:**

During upgrading, NVR will reboot itself, DO NOT power off the NVR. **Step3:** After

upgrading, go to **Menu** → **About** → **Firmware Version** to check your current **Firmware version**.

End

--- by Foscam Technical Support Team