

Upgrade Guide for FN9108HE/FN9108H

This firmware is for NVR FN9108HE/FN9108H/FN9108E, please check your NVR model on the sticker. Updating with the wrong firmware could severely damage and/or break your NVR.

Method 1: Update firmware on Foscam VMS.

Step1: Log-in your NVR on Foscam VMS, go to **System**→**System Upgrade**

Click **Browse** →choose the

FOSCAM_NVR6810E_V6.2.137.140000.update file, click **Open**→click **Upgrade**.

Step 2: “Upgrading, do not power off ... Xs” pop up.

Then NVR will reboot itself, **DO NOT** power off NVR. Please wait for NVR re-connection after firmware upgraded.

Step 3: Log-in your NVR again to check the **Firmware Version**.

Method 2: Upgrade firmware on **Monitor with USB disk**.

Step1: Copy the

FOSCAM_NVR6810E_V6.2.137.140000.update file to USB disk main directory, insert the USB disk to the NVR.

Step2: Log-in your NVR on Monitor, right click and go to **Main Menu**→**Upgrade**

Refresh to find the firmware file to do the upgrade.

Note: During upgrading, NVR will reboot itself, **DO NOT** power off the NVR.

Step3: After upgrading, right click and go to **Info**→**Version** to check your NVR **Firmware version**.

End

--- By Foscam Technical Support Team